

Caution

Please read all warnings for your safety and optimal user experience. Please read and follow these instructions carefully and retain for your records.

1. Do not disassemble or throw into fire or water.
2. Do not microwave, incinerate, paint, or insert foreign objects into the power bank.
3. Do not expose to extreme weather conditions.
4. Do not use this product if you observe visible defects.
5. Do not short circuit the product or store it in a receptacle where it may be short circuited by other metallic or conductive objects.
6. Do not operate the product if it has been wet or otherwise damaged, to prevent against electric shock, explosion and/or injury.
7. Never attempt to dismantle the unit.
8. Children should be supervised to ensure that they do not play with the product.
9. Do not leave product/device unattended (e.g., leaving in the car).
10. Always disconnect the device when not in use.
11. Do not leave the power bank (on charge or charging a device) unattended.
12. Do not use if broken, damaged, or exposed to liquids.
13. Not to be used in extremely high ambient temperatures.
14. Do not use with damaged or faulty accessories.
15. Do not place near any sources of heat, open flame, or liquid.
16. Disposal of a battery into fire or a hot oven, mechanically crushing or cutting of a battery, may result in an explosion.
17. Leaving a battery in an extremely high temperature surrounding environment, such as direct sunlight, fire, or a hot surface may result in an explosion or the leakage of flammable liquid or gas
18. The power bank will generate heat when charging. Always charge in a well-ventilated area away from direct sunlight. Do not charge under pillows, blankets or on flammable surfaces.
19. Do not subject the power bank to mechanical shock such as crushing, bending, puncturing or shredding. Avoid dropping or placing heavy objects on the power bank.
20. Do not store the power bank without power to prevent the battery from being deeply over discharged, which may cause the battery bulge.
21. Keep the power bank away from heat sources, direct sunlight, combustible gas, humidity, water, or other liquids.
22. A battery subjected to extremely low air pressure may result in an explosion or the leakage of flammable liquid or gas.
23. Operating temperature should be between 10°C to 45°C.
24. Storage and transportation ambient temperature: 10°C to 45°C.
25. There is a risk of fire or explosion if the battery is replaced with an incorrect type.
26. Replacement of a battery with an incorrect type may defeat a safeguard
27. Do not operate at an altitude higher than 13,000m (air pressure not less than 70kPa).
28. Do not hold the power bank for a long time while charging the device.nk.


CYGNETT

OUTBACK 20K SEMI-SOLID STATE
SOLAR POWER BANK - BLACK

USER MANUAL

Cygnett is a trademark of Cygnett Pty Ltd. Made in China.

Cygnett Pty Ltd 858 Lorimer St, Port Melbourne, Victoria 3207 Australia
Cygnett EU Authorised Representative 24hour-AR
Van Nelleweg 1, 3044 BC Rotterdam, The Netherlands
compliance@24hour-ar.com
Cygnett USA Inc 3838 W Carson St, Ste 220, Torrance, CA 90503
Cygnett UK Ltd 71-75 Shelton St, London, WC2H 9JQ
Cygnett NZ Ltd Level 9, 45 Queen Street, Auckland 1010

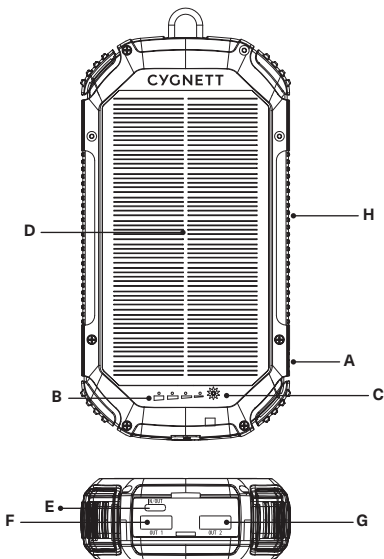

- A Power button
- B Battery indicator
- C Solar input indicator
- D Solar panels
- E USB-C output/input
- F USB-A output 1
- G USB-A output 2
- H LED flashlight

Charge Your Device

Recharge your device by connecting a compatible cable into the USB-C output (E) or USB-A outputs (F/G). Press the power button (A) and your device should begin to charge. When you are finished charging your device, remove the cable from your power bank and it will turn off automatically.

To check the remaining charge on your power bank, press the power button (A) once. The LED battery indicator (B) will show the remaining charge.

Recharge Your Power Bank

To recharge your power bank, use the included USB-C to USB-C cable with a compatible charger. Insert the USB-C connector into the USB-C input (E). When recharging, the battery indicator (B) will flash, indicating the remaining charge levels.

Alternatively, recharge your power bank by placing the power bank with the solar panels (D) facing up towards the sun. The battery solar input indicator (C) will light up to indicate it is recharging the power bank.

Flashlight

See below table for different functions on the LED flashlight (H).

Display current battery level – Single press power button
 Double press the power button: The light flashes
 Long press the button: enter always-on mode(lowest brightness)

Always-on mode – Press button: Adjust brightness of lighting
 Double press the power button: enter the flashing state
 Long press the button: turn off the lights

Flashing state – Single press: Battery indicator shows current battery level
 Double press the button: turn off the lights
 Long press the button: The light is always on (lowest brightness)

Product Specifications

Name	Outback 20k Semi-Solid State Solar Power Bank
Battery Capacity	20,000mAh/74Wh
Item Number	CY5889PBCHE
Solar Input	5.0V=0.3A (1.5W Max)
USB-C Input	5.0V=3.0A(15.0W) 9.0V=2.0A(18.0W) 12.0V=1.5A(18.0W) PD
USB-C Output	5.0V/3.0A(15.0W) 9.0V/2.22A(20.0W) 12.0V/1.67A(20.0W) PD
USB-A1/A2 Output	5V/3.0A(15W), 9.0V/2.0A(18.0W) 12.0V/1.5A(18.0W) QC
Total Output	15.0W Max