



## INSTALLATION WITH ATDEC AF- POST


### Step 1.

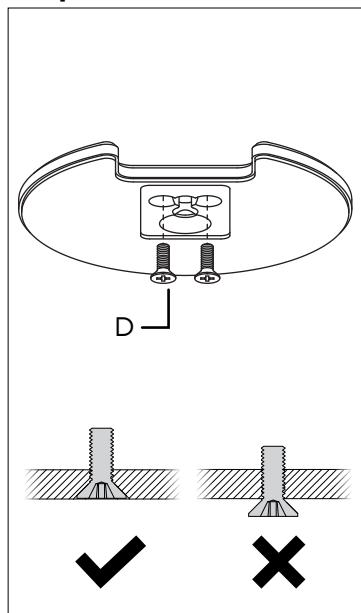


### Step 2.

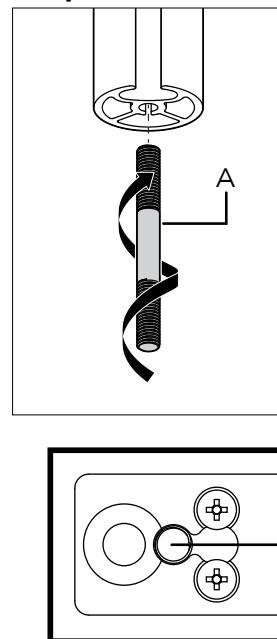

### Step 3.

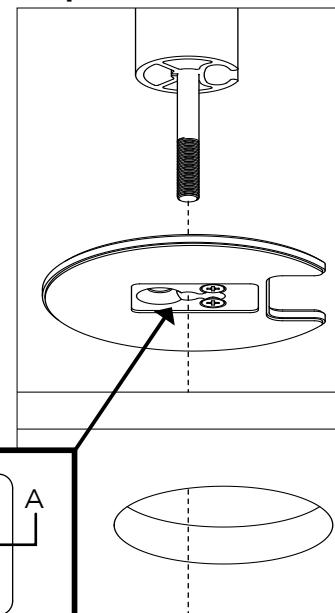


### Step 4.

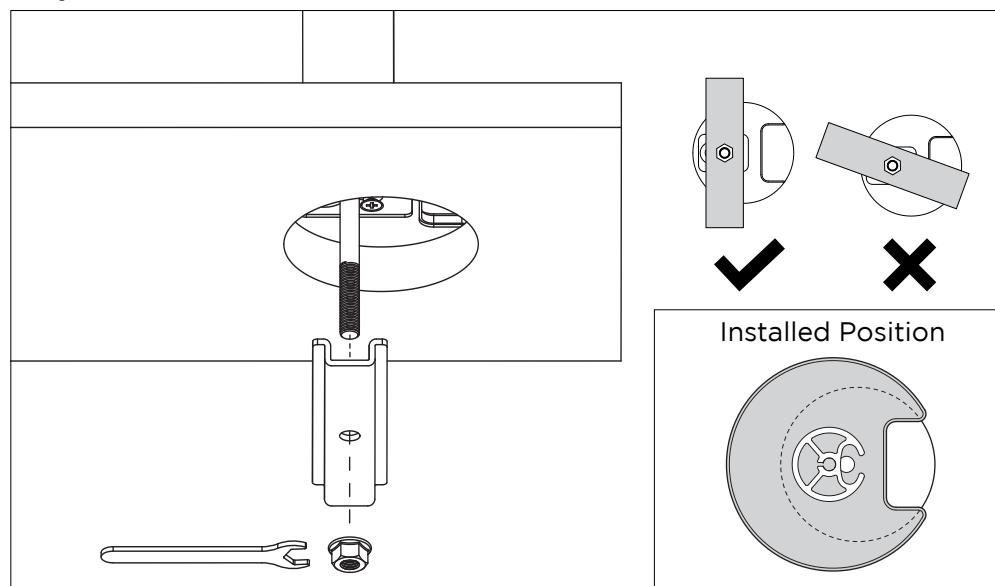


**ATDEC** Infinite  
Mounting  
Possibilities

**Installation Guide**  
AC-GC


## Grommet Clamp

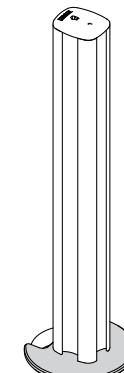

**ATDEC AWM-P**  
Go to Page 2

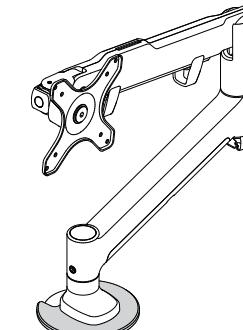

**ATDEC AWM-ADB**  
Go to Page 3

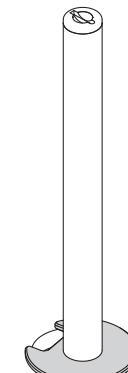

**ATDEC AF-**  
Go to Page 4


## COMPONENT CHECKLIST




Clamp Plate



Clamp Bar

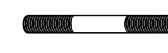

**A**  
M8 Stud

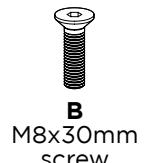

**B**  
M8x30mm  
screw



**C**  
M8x16mm  
screw

### TOOL REQUIRED



Phillips Head  
Screwdriver

## IMPORTANT INFORMATION


- ! **IMPORTANT - Install Atdec Grommet Clamp as per Installation Instructions.**
- ! The manufacturer accepts no responsibility for incorrect installation.
- ! This product is compatible with Atdec products AF- posts, AWM-P posts, AWM-ADB, APM range, VFS range posts, SD-DP range posts.
- ! The product is compatible with grommet hole sizes from 60-80mm
- ! The product is compatible with desk thicknesses from 18-36mm

**ATDEC**


No portion of this document or any artwork contained herein should be reproduced in any way without the express written consent of Atdec Pty Ltd. Due to continuing product development, the manufacturer reserves the right to alter specifications without notice. ©20171013A

## INSTALLATION WITH ATDEC AWM-P Posts

### Step 1. Assemble Post to Grommet Clamp

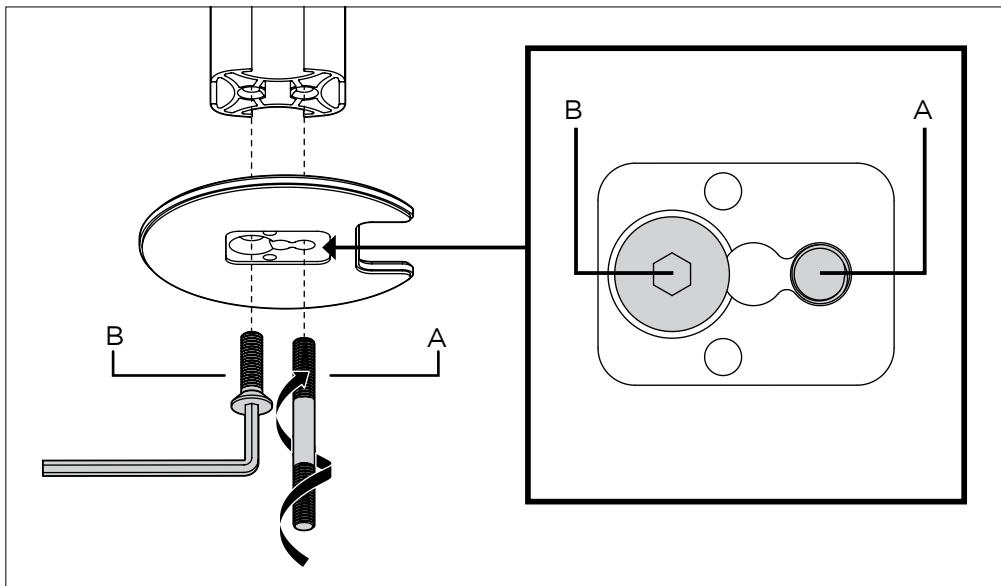


### Step 2. Install Grommet Clamp on desk

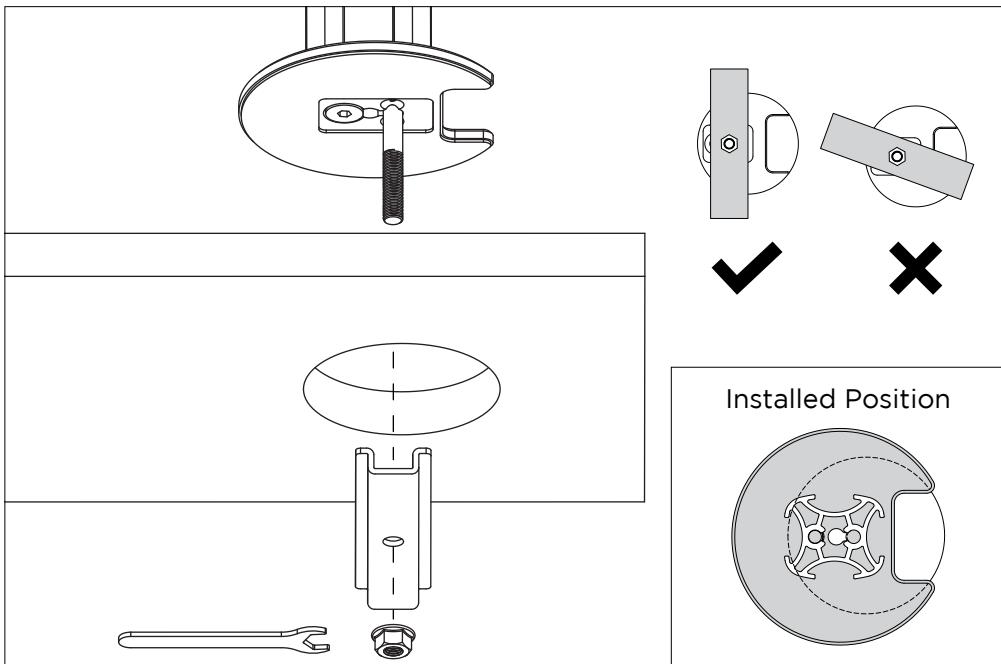

## INSTALLATION WITH ATDEC AWM-ADB

### Step 1. Assemble Base to Grommet Clamp

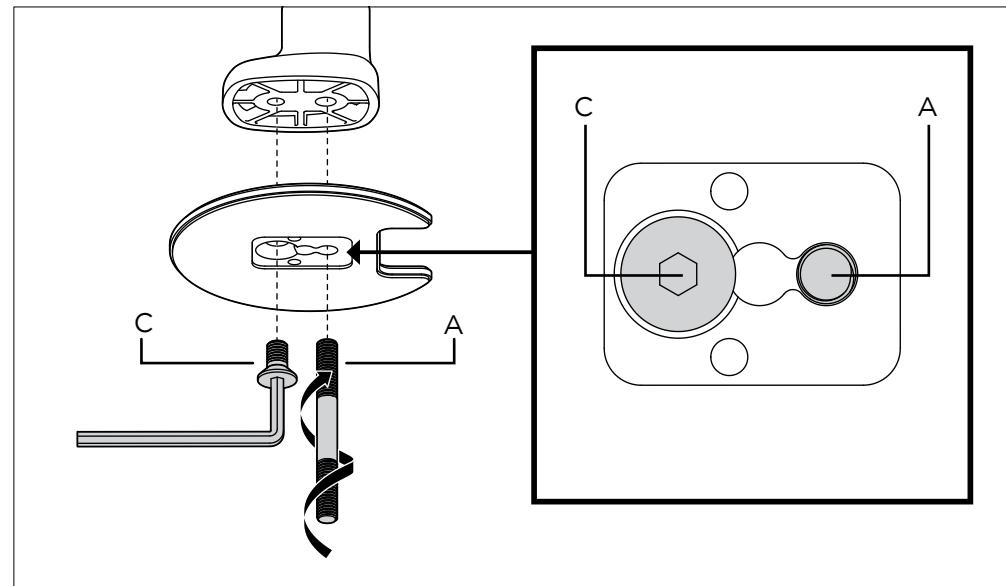

### Step 2. Install Grommet Clamp on desk

