


Installation Instructions


telehook

Flat Screen Wall Mount / Full Motion

Component Checklist

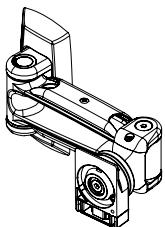

Arm Assembly

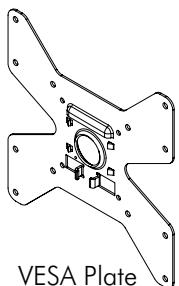

VESA Plate

Hardware



Coach Bolt (x2)



Concrete Anchor (x2)



M4/M5 Washers (x4 each)



M4/5 Spacer (x4)



Security Screw (x1)

Display Mounting Screws



M4x16/25mm (x4 each)



M5x16/25mm (x4 each)



M6x16/30mm (x4 each)

Tools Required:

- Power Drill
- 6mm (0.25") Drill Bit
- 10mm (0.4") Masonry Drill Bit
- Phillips-head Screwdriver
- 13mm (0.5") Socket Wrench or Shifter

IMPORTANT INFORMATION:

! IMPORTANT - Install Telehook 1032 Flat Screen Wall Mount as per Installation Instructions.


- This product supports a maximum load of 25kg (55lbs).
- This product supports VESA mounting hole configurations: VESA plate, 75x75mm, 100x100mm, 200x100mm, and 200x200mm.
- The manufacturer accepts no responsibility for incorrect installation.

Step 1. Check Components


Check you have received all parts against the component checklist and Hardware above.

Step 2. Attaching Arm to the Wall

Remove the Telehook Arm from the packaging and open fully.

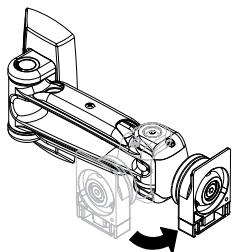


Un-clip the Wall Plate Cover and slide down the arm.

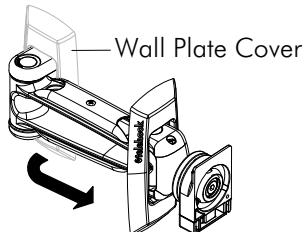

Timber Stud Wall

- Drill two 6mm (0.25") diameter holes, 50mm (2") deep.
- Secure the Mounting Plate to the wall using the Coach Bolts supplied.


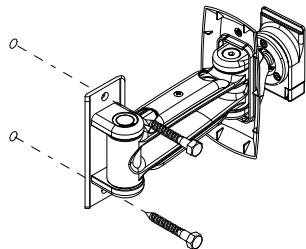


Masonry Wall


- Drill two 10mm (0.4") diameter holes, 50mm (2") deep.
- Secure the Mounting Plate to the wall using the Coach Bolts and Concrete Anchors supplied.

OR

Slide the Wall Plate Cover back along the arm, and push flat against the wall.

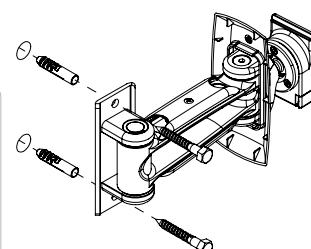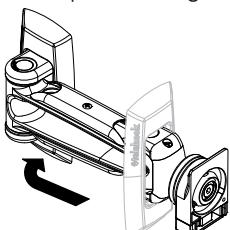


Step 3. Attaching the VESA Plate to your Display

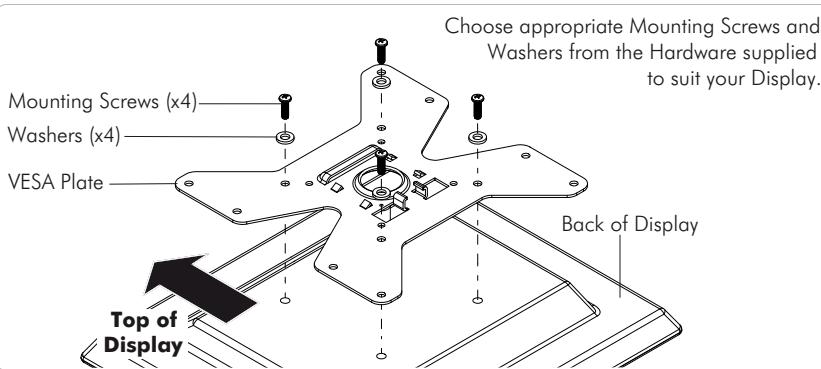




Recessed Mounting Holes or Display with a Curved Rear Panel

If the Mounting Holes are recessed into the back of the Display, or the Display has a curved rear panel, use the appropriated Spacer Bushes supplied to pack the Mounting Holes.


Note: Ensure the VESA plate is securely fixed to the display.

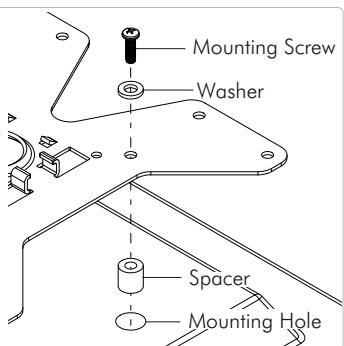


Step 4. Attaching your Display to the Arm

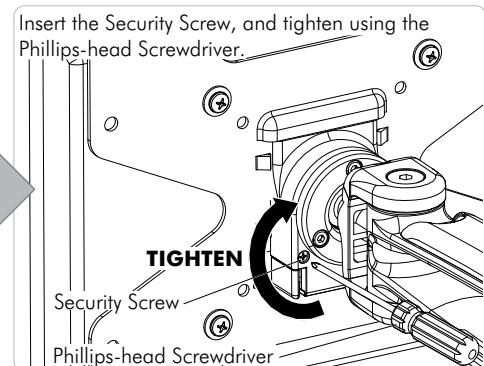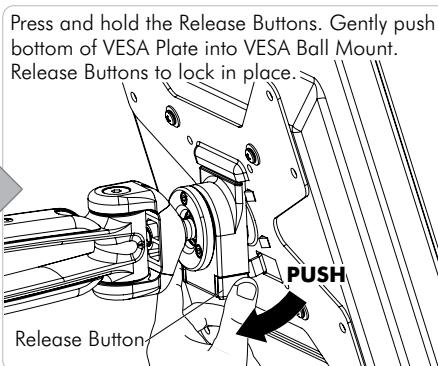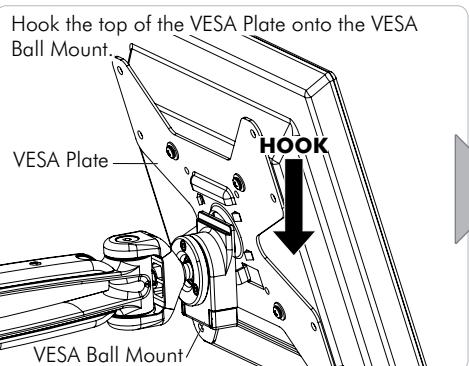

Step 5. Cable Management

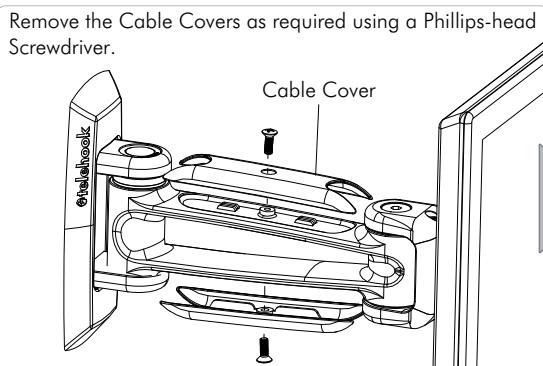


Connect cables to your Display, and route along the arms. Re-attach the Cable Covers to hold the Cables in place.

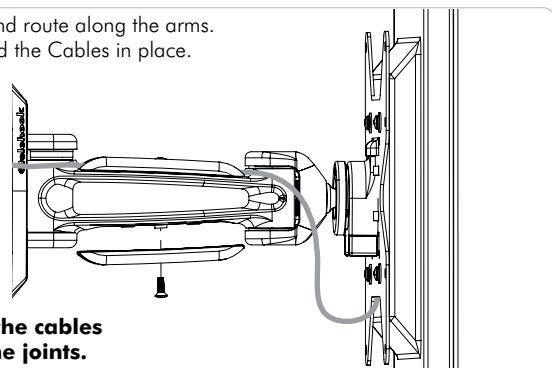

TIP: Leave enough slack in the cables to allow full movement at the joints.

Step 6. Final Adjustment

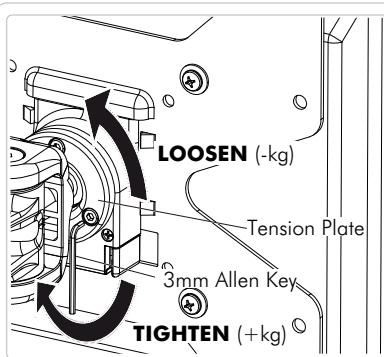


Position your Display to the desired viewing angle using the 40° angular movement allowed by the VESA Ball Mount.

If the display does not hold its position, or is too resistant, adjust the Tension Plate located at the rear of the VESA Ball Mount.

To make any adjustments, use the 3mm Allen Key supplied. Apply half a turn at a time to each screw on the Tension Plate to adjust evenly.

Check the display, and then adjust again if necessary.

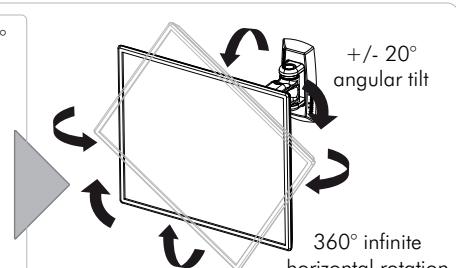

Rotate the Display as desired, locking the Display into position by tightening the Tension Plate.

Installation Complete

